


PRO BINDING & BOARD SETUP TIPS

Your new bindings work best on a dialed-in board setup

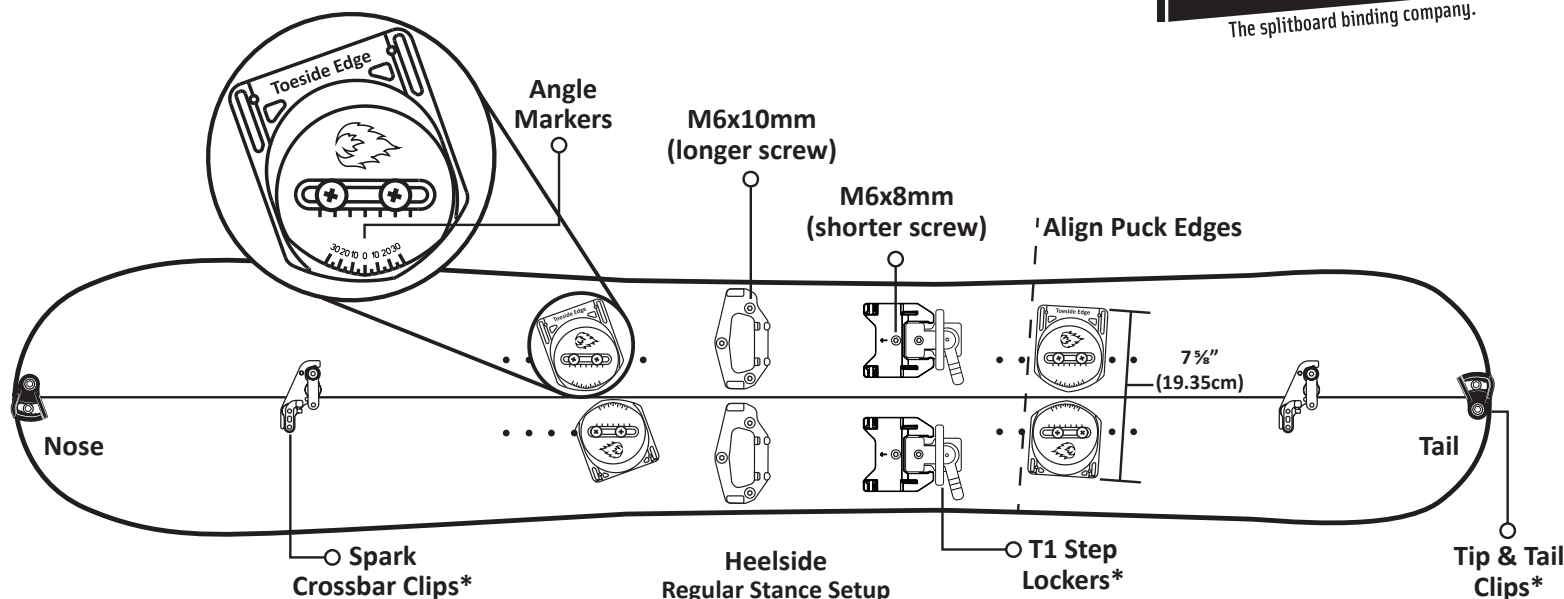

CHECK YOUR BOARD SETUP

Puck Setup:

- For Spark Puck setup please see the instructions included with your packaged pucks or find the installation guide on our website: sparkrandd.com/gear/spark-pucks. Setup is slightly different for Spark Canted Pucks: sparkrandd.com/gear/canted-pucks
- For other puck brands please refer to the manufacturer's website for setup instructions.

Puck Troubleshooting:

- The outside length from puck to puck should be 7 7/8" (19.35cm).
- The bindings should slide on easily. If it feels like they are jamming, check your puck alignment and make adjustments as necessary.
- If your pucks are brand new, the fit might feel tight but will break in after just a couple of times changing over.
- If still too tight, sand lightly on the top and sides of the pucks with the included sandpaper. Check fit while pucks are wet.
- With the bindings on the pucks in ride mode, you should be able to easily snap down the toe ramp. If you can't, loosen the screws and nudge the toeside puck in slightly.

Heel Rests:

- Orient the heel rests so that the arrow points toward the nose of the board. Attach the heel rests with the M6x8 screws (the shorter screws- you will have 4 of these).

Touring Brackets:

- Attach the touring brackets with the M6x10mm screws (the longer screws- you will have 6 of these). First insert and turn the three screws a few times but don't fully tighten. Once all screws are in loose you can continue turning one at a time until they are fully tightened.

You are now the proud owner of Spark R&D PRO bindings

the lightest and highest performing splitboard bindings in the world. There are many custom components on these bindings, from carbon reinforced nylon highbacks to aluminum heel loop screws, Pebax straps to hollow pivot pins. If you ever need service or spare parts please mention that you have PRO bindings so that we can get you styled out with PRO parts.

Pro bindings use high performance custom aluminum screws. Please be precise in their placement and slowly tighten as you go.

OUR BINDINGS ARE FULLY ADJUSTABLE!

If the fit is not perfect out of the box, use the included Spark pocket tool to adjust the heel cup position, toe and ankle strap lengths, and highback rotation. Then throw the tool in your pack so it's always with you when you're out in the backcountry.

Check to see that your screws are tight from time to time for uninterrupted shredding.

*Other Spark R&D Products:

Spark Crossbar Clips

Features a one piece crossbar that extends from one set of bolts to the other. The cam lever clamps the board together, taking gaps out of the board seam, and rotates out of the way for touring.

Tip & Tail Clips

Our tip and tail clips offer a custom fit to match the variability in any board. With five progressively tighter notches you can get your board as tight as you want.

T1 Step Lockers

Allows splitboarders to lock down their heel in tour mode to better adapt to diverse split-skiing terrain. Lockers attach to the heel rest. Rotate the lever and step in to lock. Rotate lever back to release.