

# T1 STEP LOCKER

## Instructions and Setup Guide

### Compatibility:


Compatible with all splitboards using Spark R&D T1 Heel Rests.

**Note:** The Step Locker is intended to be used as a touring and climbing aid. Not to be used for high speed downhill skiing. Step Lockers are releasable and may release unexpectedly, potentially leading to a loss of control.


Like anything, being a proficient split skier takes practice. Just adding a heel locker to your split will not make you ski like Ester Ledecká. If possible, a few runs of split skiing at your local resort or in mellow terrain will really help your technique, and will pay off when you need to tackle more challenging terrain as is often found on the skin track.

## Setup Instructions:

### Included Parts


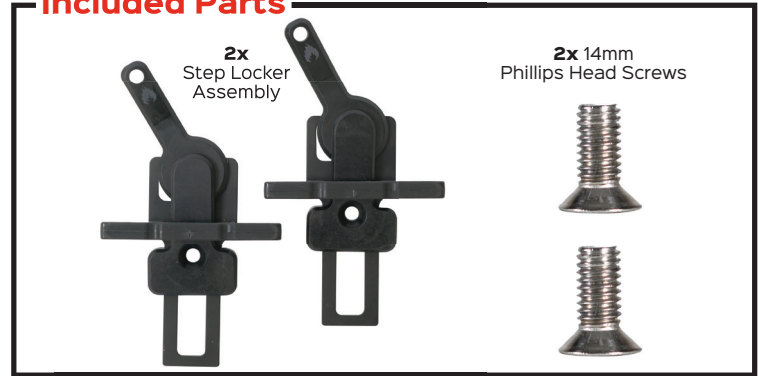


### Installation Tools

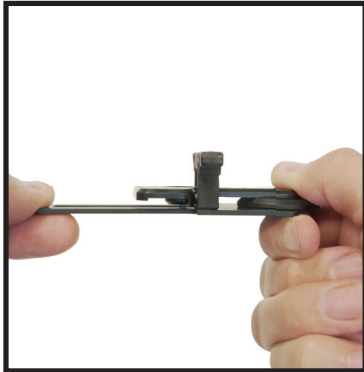


#### STEP 1

Start by removing a heel rest from your splitboard, keeping the existing 8mm screws on hand for step 4. Remove the step locker assembly from the packaging. Open the locker assembly by pressing the lever end and lifting the front of the upper piece.

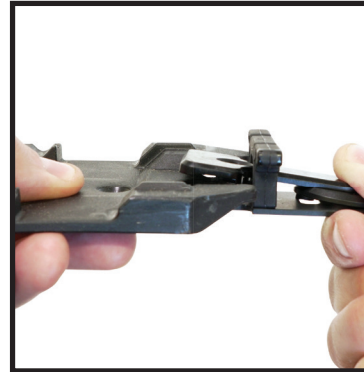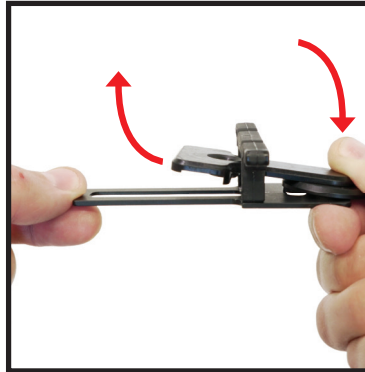


#### STEP 2

Slide your existing heel rest between the two locker assembly parts. Line up the screw hole on the locker assembly with the rear hole on your heel rest. Flip the locker assembly and heel rest over. Rotate the lever until the two lever pins fit through the hole in the lower piece. Check that the two black plastic spacers are in place on the lever pins.

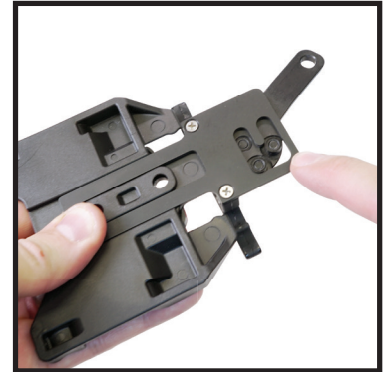


#### STEP 3

Install an included 14mm phillips head screw through the step locker assembly and heel rest and into your board.

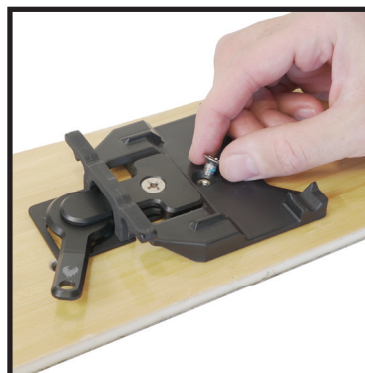

#### STEP 4

Install one of your existing 8mm heel rest screws into the front heel rest hole. Tighten both screws.

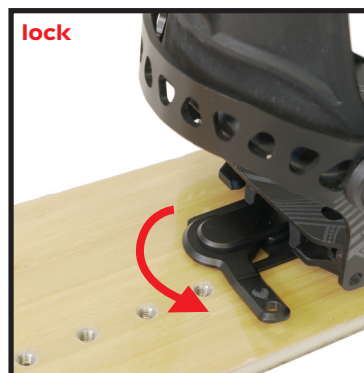

#### STEP 5 - Rotate to lock and unlock



Once installed, test your step locker in both the locked and unlocked positions by rotating the lever to the right and left. The lever should rotate easily and you should feel it engage into both positions. If not, check that the two black plastic spacers are in place on the lever pins from step 2, or that you have not overtightened the mounting screws.

T1 Step Lockers require approximately 3.5 in. / 89 mm between the rear heel rest insert and your puck to allow clearance for the lever to swing between positions.

Repeat steps 1-5 on second board half. Go split ski!