


Product guide for the Mr. Chomps crampons by Spark R&D

The Mr. Chomps crampons work with either the tall or short riser bars. Some boards have an offset touring bracket and require an offset centering bar, these are the Prior '07-'08 Khyber 165 and 170, Spearhead and Splitswallow. If you find that the teeth of your crampons hit the board, give us a shout and we'll get you set up with some offset parts. The standard crampons have an inside width of 138mm and fits boards with a 26cm waist and narrower, wider boards require our wide crampons. Factory splits requiring the wide crampons are the '08-'09 Prior Khyber 170, Spearhead 178, and the Venture Divide Wide (28 cm waist).

Before use:

Gray flat shims (1) are shipped with the crampons. Swap these with the Voile pin guides (2) underneath the touring brackets as seen below (you'll need a #3 Phillips head screw driver):

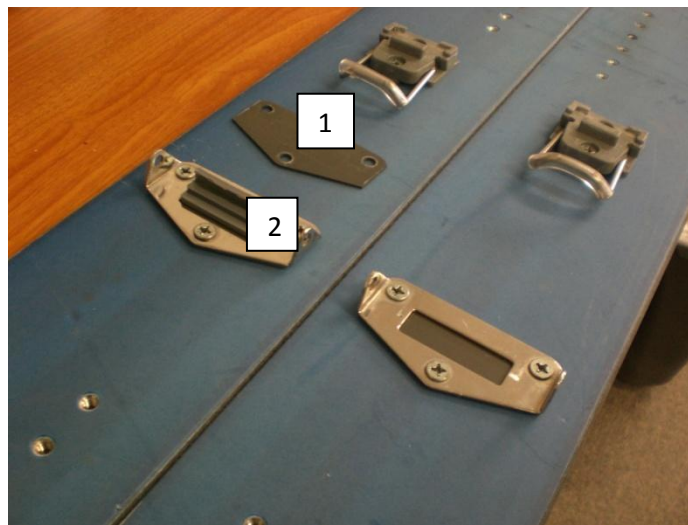


Installation, use and removal:



Mr. Chomps grabs onto the underside of the pin, shown here without the binding for clarity:



To install your crampons rotate the bindings forward and press the front of the crampon on to the pin:

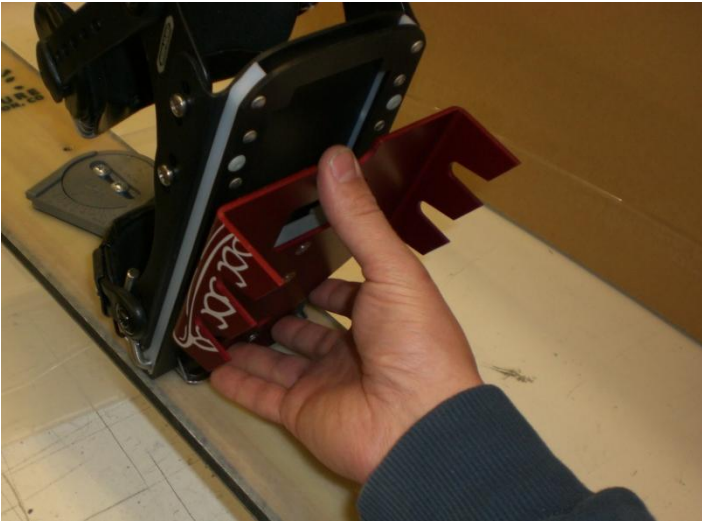

When the skin track is steeper flip up the normal heel rest and the rest on the crampon, you'll have the same amount of teeth in the snow as without the rests. You can also flip the normal heel rest down over the crampon for a fixed mode:

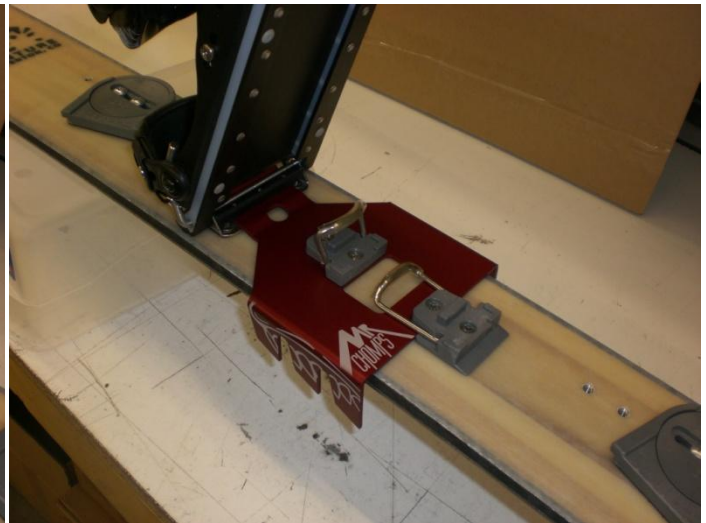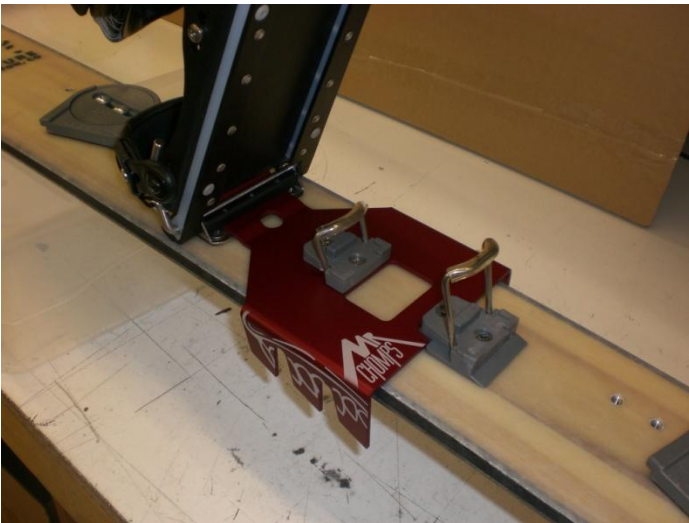

Crampon removal is the reverse of installation (you will have to flip down the rest on the crampon). If you are having any problems with your crampons send an email to info@sparkrandd.com and we'll get it sorted out asap. We hope you enjoy your new toys!

Will Ritter, Owner



Spark R&D

<http://www.sparkrandd.com>

will@sparkrandd.com

PO Box 3284

Bozeman MT 59772

Phone: 406.580.9884

Fax: 866.717.4267