

Follow through the steps in this guide and you should be set-up and ready to go in just a few minutes. Additional info and answers are available on our website: www.sparkrandd.com. You can also feel free to contact us at: info@sparkrandd.com or 406.580.7674. Thanks, and enjoy your new toys!

IMPORTANT:

The hardware included with these adapters is meant for the Dynafit TLT Speed toe piece. Different length screws are required for different toe pieces. If you are using any toe piece other than the TLT Speed, call or email for set-up suggestions.


SET-UP INSTRUCTIONS:

****Note: Place a dot of the enclosed Loctite 242 thread locker on each fastener used during set-up.**



1. Remove the Voile touring bracket and heel rests, install the toe piece converter using three M6 x 10 phillips head screws:




2. Place the Dynafit baseplate on top of the converter and install the Dynafit toe piece using four M5 x 10 phillips head screws:

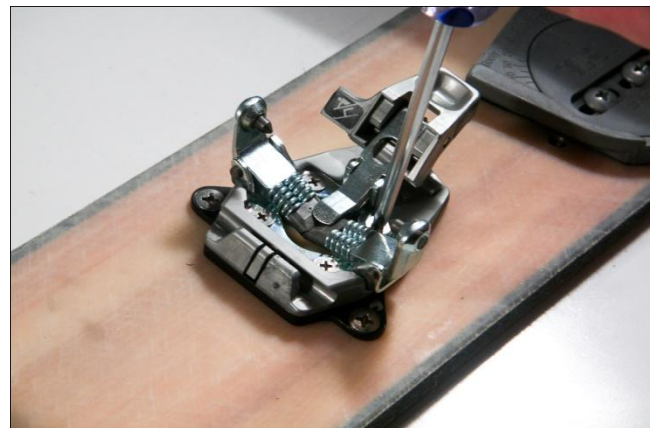

3. Install the M5 x 8 hex cap screw and tighten with an M4 allen wrench:

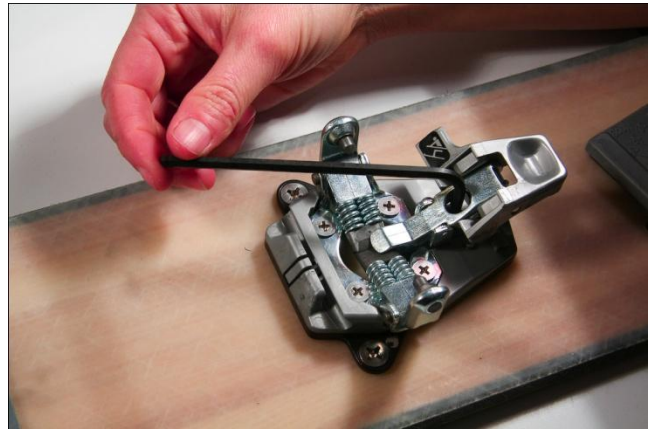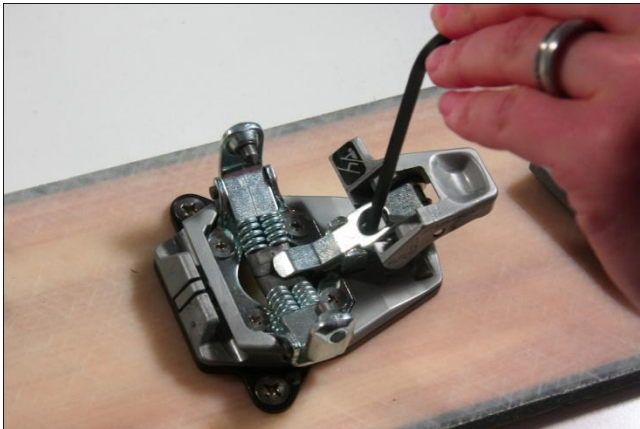

4. Click your boot into the toe piece and determine the proper placement of the heel rest, i.e. not in the arch of your boot:

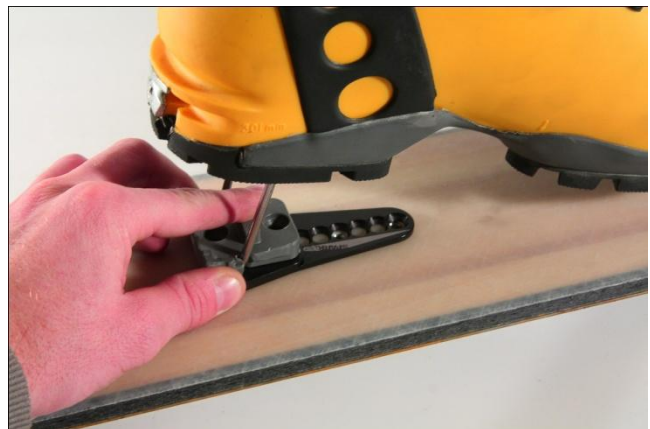

5. Attach the heel adapter to the board with two M6 x 10 screws, then attach the heel rest to the adapter with two M6 x 10 screws:



You're ready to rip!