

SOLID BOARD PUCKS

Instructions and Setup Guide

Compatibility:



Works with all 4x2 insert & channel solid boards.

Setup Instructions

STEP 1


Start by placing the **left** Puck disk (indicated by the L or R on the underside) into the center ring of a solid board puck. Line up your desired angle to the angle indicator on the puck and center the disk in the adjustment ring.

Note: You can move the puck disk toward the toe or heelside of the alignment ring during heel/toe centering in step 4, but it's best to start in the center.

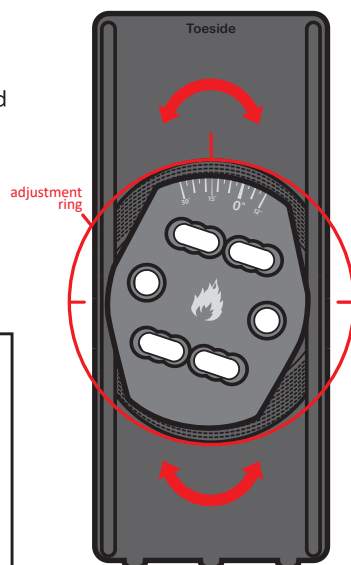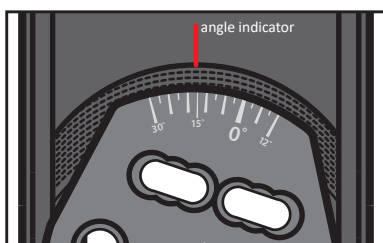

STEP 2


With the toeside indicator on your puck pointing to the toeside of your board, align the holes in the aluminum disk with the insert holes on your board. For channel boards align the two outermost disk insert holes to your T-nut inserts. Move the puck and disk assembly left or right to fit your stance width.

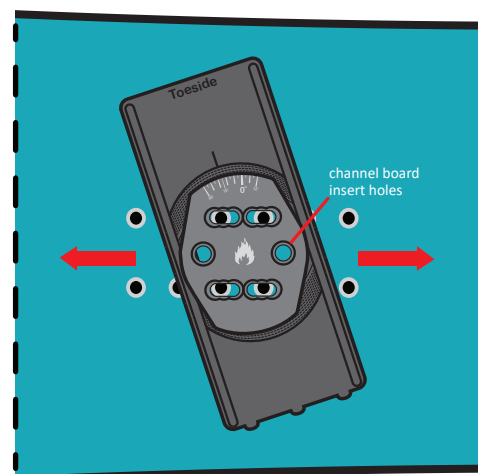

STEP 3

Once in place attach with M6x16mm screws - use four for insert boards, two for channel boards.


Tighten.

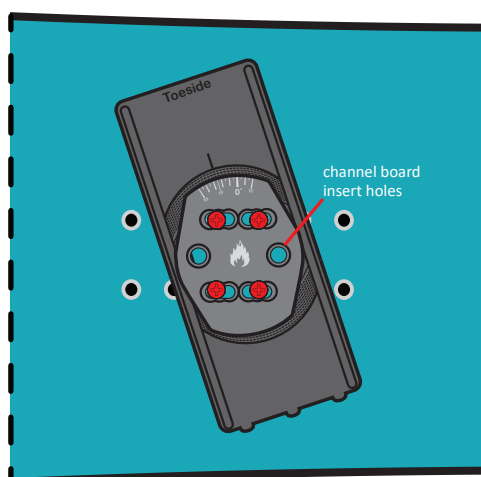

STEP 4

Now, slide your binding across the pucks. Check your heel/toe centering on your board. If your heel or toe hang off a bit, unscrew your screws half way and lift up the puck disk. Slide the puck in your desired direction and replace your disk in the alignment ring.


Re-tighten your screws.

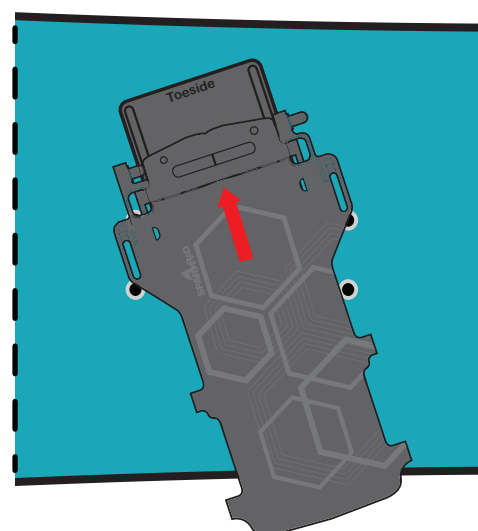

STEP 5

Repeat these steps for your **right** foot. Go snowboarding!

Included Parts

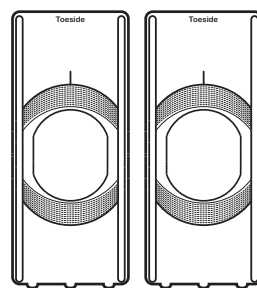

2x Solid Board Pucks



8x M6x16mm Screws




1x Right Puck Disk



1x Left Puck Disk

Required Tools

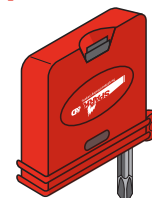

#3 Phillips head screwdriver (found in your spark tool)